



SteraMist™ Surface Unit Quick Reference Guide

Application:

- 1. Don appropriate PPE before entering treatment area.
- 2. Move Surface Unit into treatment space.
- 3. Open case, remove power cord, and plug unit into a standard wall outlet.
- 4. Open chemical bottle, remove all safety aluminum bottle covers if present. Insert dip-tube into bottle and secure cap. Place only BIT™ chemical bottle in bottle compartment with fluid window facing out.
- 5. Set Prime/Spray, switch to Prime. With applicator directed into a (paper cup, sink, waste bin, or chemical bottle) press and hold trigger on applicator until a steady stream of fluid is emitted from nozzle.
- 6. Release trigger.
- 7. Switch the Prime/Spray switch to Spray.
- 8. Apply SteraMist™ to target surfaces as a light, even mist on desired surfaces. Do Not Over Wet.

Procedure After Use:

- 1. Remove dip-tube from chemical bottle.
- 2. With Prime/Spray switch in Spray, apply SteraMist™ to all parts of the SteraMist™ Surface Unit (case, underside and wheels, power cord, and hose).
- 3. Set Prime/Spray switch to Prime, then press applicator trigger to purge remaining chemical from machine into a paper cup, sink, waste bin, or chemical bottle.
- 4. Place dip-tube into distilled water bottle (no tap water) and press trigger to draw water into machine. After 10 seconds remove dip-tube from water, but keep trigger pressed until water travels through system and out nozzle (approximately 1 minute).
- 5. Turn power off and unplug machine.
- 6. Clean inside of applicator nozzle guard, electrodes, posts, nozzle with alcohol prep-pad.
- 7. Replace applicator and hose to inside of Surface Unit door.
- 8. Replace power cord to storage compartment inside Surface Unit.
- 9. Close case. Leave room.